MUSTANG

IMPORTANT SAFETY PRECAUTIONS

Basic safety precautions should be followed when using electrical appliances, especially when there are children.

In order to avoid electric shock follow the following rules

• Before cleaning the electrical appliance, unplug it from the mains.
• Do not use the electrical appliance in a bath or shower. Do not drop it into water or other liquids.
Do not touch an electrical appliance that has fallen into the water! Unplug it immediately.

In order to prevent a burn, fire, or injury

• Use this appliance only for the purposes described in this operations manual. Do not use devices that are not recommended by the manufacturer.
• Never leave this electrical appliance plugged in unattended.
• When an electrical appliance is used by children or persons with disabilities, it must be carefully supervised.
• Never operate the electrical appliance if the cord or plug is damaged.
• Keep the cord away from hot surfaces. Do not pull or bend the cord. Do not wrap it around the electrical appliance.
• Do not drop the electrical appliance. Do not insert foreign objects into its holes.
• Make sure that the blades are properly adjusted before using this appliance.

Warranty obligations

1. The manufacturer guarantees the operation of the product under the conditions of transportation, storage, and operation.
2. The warranty covers all damage to the product probably caused by a manufacturing defect.
3. The warranty does not cover mechanical damage to the product.
4. The warranty period of the product is 12 months from the date of sale.

The warranty does not cover the following products

• Products, if malfunctions in them have arisen as a result of the violation of the rules of operation and transportation.
• Damage caused by overuse, improper handling, improper storage or maintenance, and improper blade removal.
• Components worn out during operation and having a limited service life (POWER CORDS, brushes, plastic leashes, etc.)
• Damage caused by getting foreign objects, substances, and insects in.
• Self-repair of the product or repair carried out in non-specialized workshops.

The consumer loses the warranty service rights in the following cases

• at the expiration of the warranty period;
• in the presence of mechanical damage to the outer parts of the product;
• in case of violation of the rules of operation.
Cleaning and lubrication of products and sharpening of blades after any period of operation are not included in the cost of warranty service.

You must show the documents certifying the purchase of this product, this product manual with the signature of the seller, and the stamp of the trading organization to get the warranty repair.

«_____» _____ 20___year

_____ _____
Seller Signature

Place for stamp

«_____» _____ 20___year

_____ _____
Seller Signature

Place for stamp

MUSTANG

Shaver

COLT MJS-01

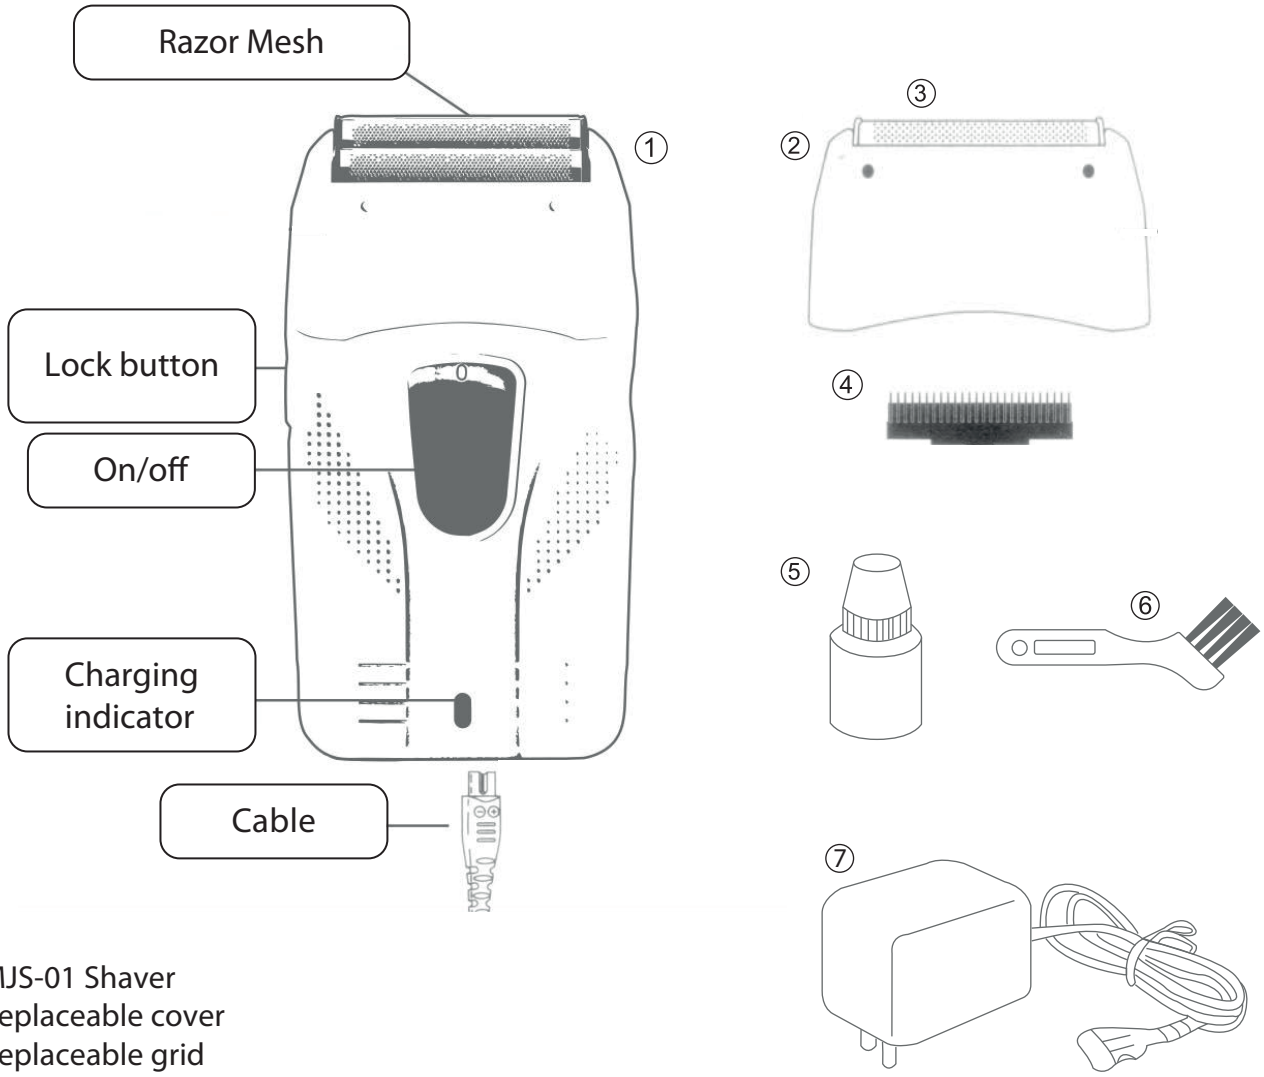

1. MJS-01 Shaver
2. Replaceable cover
3. Replaceable grid
4. Replacement knife
5. Oil
6. Cleaning Brush
7. Battery charger

TECHNICAL SPECIFICATIONS

Hair clipper	Motor	Working voltage: 3 V Motor rotation speed: 6800 rpm
	Battery	Battery capacity: 800 mAh Working time: 120 min Charging time: 240 min
Adapter		Input: 100 – 240 V, 50 – 60 Hz Output: 5 V, 1000 MA

MUSTANG

OPERATING INSTRUCTIONS

Important!

The shaver was not charged at the factory. Please charge the shaver at least 5 hours before the first use to achieve maximum performance.

Charging method

1. Remove the shaver and charger from the box.
2. Plug the charger into an outlet.
3. Make sure the switch is in the "OFF" position after start charging.
4. The green charging indicator will light up indicating the charge status.
5. After the battery is fully charged, the charging indicator will go out.

If the razor should remain unused for a long period of time, store it in a safe, cool, dry place. Do not wrap the cord tightly around the razor. Do not hang the razor by the power cord.

Replacement of the knife block

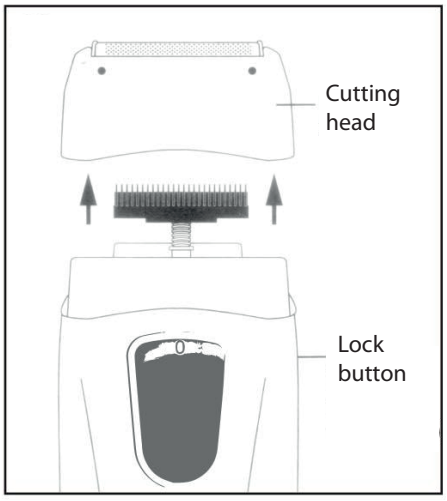

1. Remove the cutting head by pressing the round lock button located on the right side of the shaver. Grasp the cutting head on both sides and carefully remove it from the shaver.
2. Place the replacement nets over the knives. Be careful not to damage the foil. Gently place the cutting head on the shaver and push until it snaps.

Replacement of knives

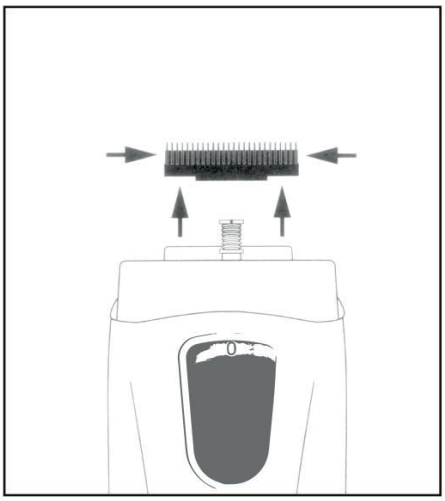

1. To remove the knife block, grasp it from both sides and pull it up.
2. To install a new knife block, hold it on both sides and align the metal shaft on its underside with the notch on the razor drive and gently push down until it snaps.

MUSTANG

Cleaning method

Regular cleaning of the device is necessary to maintain optimal performance and maximum safety of your shaver. Do not wet the shaver, razor nets or knives! Use a special cleaning brush (included)

Cleaning the shaver

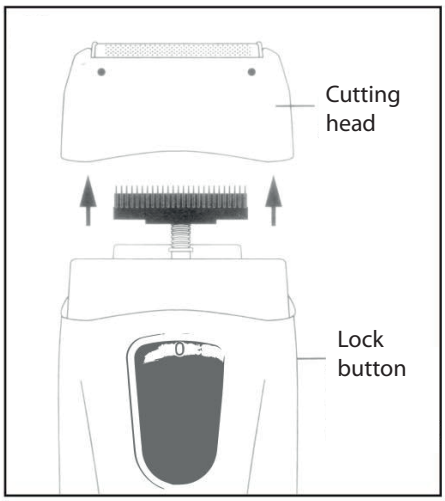

1. Remove the cutting head by pressing the round lock button located on the right side of the shaver. Grasp the cutting head on both sides and carefully remove it from the shaver.
2. Gently tap the base of the cutting head on a flat surface so that the hairs inside fall out. Do not remove the mesh, otherwise it may be damaged.
3. Brush the hair from the knives. If necessary, you can remove them from the razor for better cleaning.
4. Install the cutting head on the shaver.

Important!

To achieve the best shaver performance and best shaving results, it is recommended to replace the cutting head and knives every six months.

Warning

1. Do not disassemble the device yourself.
2. This device is not washable with water. Please keep it away from the wet environment when using it.
3. The device should only be cleaned with a material slightly soaked with water or mild soapy water.
4. Do not charge the device at temperatures above 40°C or below 0°C.

• The device will become slightly warm during use or charging, this is not a fault.
• Please use the original charging cord.

Fault recovery

If the device is not working or not charging correctly, please check the following:

• Check for power availability at the power outlet by plugging in another device
• Make sure the device is not connected to a power source when it automatically turns off
• Make sure that the contacts between the device and the power adapter are clean and free of hair or other contaminants.
• Make sure the cutting head is installed correctly
• Make sure your device is fully charged